


HWH32-220GCE to HWH63-370GCE Replacement Parts List

Nr.	Description item	Item Comments	Gas	Refer To Drawing On Page 2			
				HWH32-220GCE	HWH33-370GCE	HWH52-370GCE	HWH63-370GCE
1	Controller	Control Kit HWHC/HWH					LV311399
2	Gas Valve	Gas Valve/Venturi Assembly	G20				LV310155
		Gas Valve/Venturi Assembly	G31				LV310157
3	Burner Assembly	Burner Assembly	ALL				LV309297
4	Power Anode / Ti-anode / Ti-electrode	Anode Assembly Short		LV197710002			LV197709
5		Anode Assembly Long		-			LV197710
6	Fan	Fan RG148/1200-3633					LV309159
7	Hot Surface Igniter	Hot Surface Igniter Service Kit					LV309232
8	Flame Sense Electrode	Flame Sensor					LV310075
9	Correx Potentiostat	Correx Potentiostat 2.3					LV306160
10	Temperature Sensor	Sensor Top Of Vessel (4 pins)					LV304469
11	Temperature Sensor	Sensor Bottom Of Vessel (2 pins)					LV308149
12	Air Proving Switch Assembly	Air Proving Switch Assembly (115 Pa)					LV309169
13	Cable Assembly	Cable Assembly					LV309136
14	Gasket And Fixings Kit	Gasket/Mounting Set					LV309608
15	Air Inlet Pipe	Air Inlet Connection Pipe					LV309148
16	Inspection Door Service Kit	Inspection Door Service Kit					LV305082
17	Drain Valve	Drain Valve 1"					LV308997
18	Flue Transition Collar	Connector Exhaust					LV192636
19	Solar Control	Solar Heat Master - Lochinvar Ltd					LV311400
20	Sensor Collector	Collector Sensor Single (20k/2 pins)					LV308904
21/22	Temperature Sensor	Temp. Sensor Single (2 pins/short)					LV308149
23	LPG Governor	LPG Governor					LV310180
24	Temperature and Pressure Relief Valve	T&P ¾" 150 PSI Supplied with Unvented Kit					PTM1002

Note. Use in conjunction with Drawings EVD-0054 below

HWH32-220GCE to HWH63-370GCE Replacement Parts List

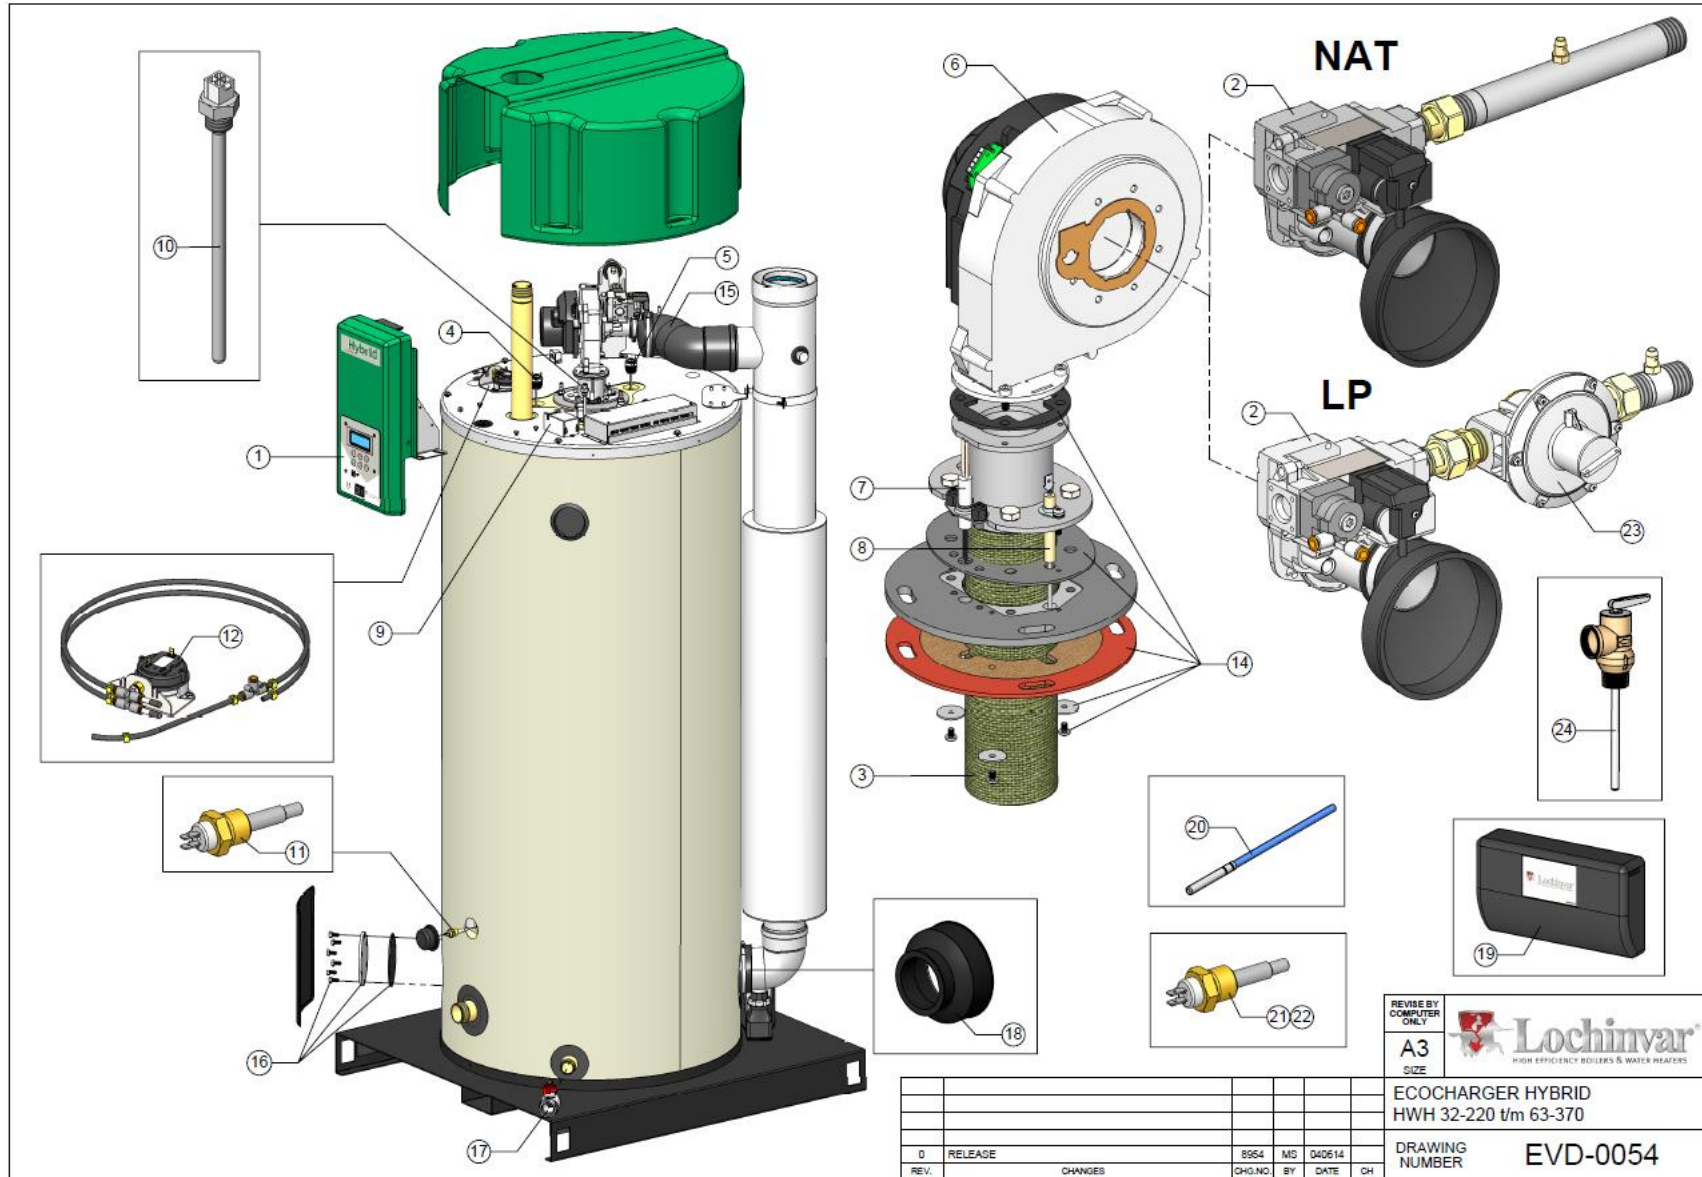

REV.	CHANGES	CHG.NO.	BY	DATE	CHK
0	RELEASE		B954	MS	040614

REVISE BY COMPUTER ONLY
A3
 SIZE



ECOCHARGER HYBRID
 HWH 32-220 t/m 63-370

DRAWING NUMBER **EVD-0054**