

HWH32-220GCE to HWH63-370GCE Replacement Parts List

Nr.	Description item	Item Comments	Gas	Refer To Drawing On Page 2			
				HWH32-220GCE	HWH33-370GCE	HWH52-370GCE	HWH63-370GCE
1	Controller	Control Kit HWHC/HWH		LV311399			
2	Gas Valve	Gas Valve/Venturi Assembly	G20	LV310155			
		Gas Valve/Venturi Assembly	G31	LV310157			
3	Burner Assembly	Burner Assembly	ALL	LV309297			
4	Power Anode / Ti-anode / Ti-electrode	Anode Assembly Short		LV197710002	LV197709		
5		Anode Assembly Long		-	LV197710		
6	Fan	Fan RG148/1200-3633		LV309159			
7	Hot Surface Igniter	Hot Surface Igniter Service Kit		LV309232			
8	Flame Sense Electrode	Flame Sensor		LV310075			
9	Correx Potentiostat	Correx Potentiostat 2.3		LV306160			
10	Temperature Sensor	Sensor Top Of Vessel (4 pins)		LV304469			
11	Temperature Sensor	Sensor Bottom Of Vessel (2 pins)		LV308149			
12	Air Proving Switch Assembly	Air Proving Switch Assembly (115 Pa)		LV309169			
13	Cable Assembly	Cable Assembly		LV309136			
14	Gasket And Fixings Kit	Gasket/Mounting Set		LV309608			
15	Air Inlet Pipe	Air Inlet Connection Pipe		LV309148			
16	Inspection Door Service Kit	Inspection Door Service Kit		LV305082			
17	Drain Valve	Drain Valve 1"		LV308997			
18	Flue Transition Collar	Connector Exhaust		LV192636			
19	Solar Control	Solar Heat Master - Lochinvar Ltd		LV311400			
20	Sensor Collector	Collector Sensor Single (20k/2 pins)		LV308904			
21/22	Temperature Sensor	Temp. Sensor Single (2 pins/short)		LV308149			
23	LPG Governor	LPG Governor		LV310180			
24	Temperature and Pressure Relief Valve	T&P ¾" 150 PSI Supplied with Unvented Kit		PTM1002			
-	Gas Valve Cable			LV309336			

Note. Use in conjunction with Drawings EVD-0054 below

