

HWH87-480GCE to HWH129-480GCE Spare Parts List

Nr.	Description item	Item Comments	Gas	Refer To Drawing On Page 2		
				HWH87-480GCE	HWH106-480GCE	HWH129-480GCE
1	Controller	Control Kit HWHC/HWH			LV311399	
2	Gas valve/venturi Assembly.	Gas Valve/Venturi Assembly	G20		LV309167	
		Gas Valve/Venturi Assembly	G31		LV309168	
3	Burner Assembly	Burner Assembly	ALL		LV309125	
4	Power Anode / Ti-anode / Ti-electrode	Anode Assembly Short 305mm			LV197709	
5		Anode Assembly Long 1220mm			LV197710	
6	Fan	Fan RG175/2000—3633-010204			LV309119	
7	Hot Surface Igniter	Hot Surface Igniter Service Kit			LV309232	
8	Flame Sense Electrode	Flame Sensor			LV310075	
9	Correx Potentiostat	Correx Potentiostat 2.3			LV306160	
10	Temperature Sensor	Sensor Top Of Vessel (4 pins)			LV304469	
11	Temperature Sensor	Sensor Bottom Of Vessel (2 pins)			LV308149	
12	Air Proving Switch Assembly	Air Proving Switch Assembly (210Pa)			LV309331	
13	Cable Assembly	Cable Assembly			LV309136	
14	Gasket And Fixings Kit	Gasket/Mounting Set			LV309609	
15	Air Inlet Pipe	Air Inlet Connection Pipe			LV309129	
16	Inspection Door Service Kit	Inspection Door Service Kit			LV305082	
17	Drain Valve	Drain Valve ¾"			LV026273004	
18	Flue Transition Collar	Connector Exhaust			LV308196	
19	Solar Control	Solar Heat Master - Lochinvar Ltd			LV311400	
20	Sensor Collector	Collector Sensor Single (20k/2 pins)			LV308904	
21/22	Temperature Sensor	Temp. Sensor Single (2 pins/short)			LV308149	
24	Temperature and Pressure Relief Valve	T&P Supplied with Unvented Kit			PTM1002	
-	Gas Valve Cable				LV309336	

Note. Use in conjunction with Drawings EVD-0055 below

HWH87-480GCE to HWH129-480GCE Replacement Parts List

