

HWHC44-370GCE to HWHC63-370GCE Replacement Parts List

Nr.	Description item	Item Comments	Gas	Refer To Drawing On Page 2	
				HWHC44-370GCE	HWHC63-370GCE
1	Controller	Control Kit HWHC/HWH		LV311399	
2	Gas valve	Gas Valve/Venturi Assembly	G20	LV310155	
		Gas Valve/Venturi Assembly	G31	LV310157	
3	Burner Assembly	Burner Assembly	All	LV309297	
4	Power Anode / Ti-anode / Ti-electrode	Anode Short 305mm		LV197709	
5		Anode Long 1220mm		LV197710	
6	Fan	Fan RG148/1200-3633		LV309159	
7	Hot Surface Igniter	Hot Surface Igniter Service Kit		LV309232	
8	Flame Sense Electrode	Flame Sensor		LV310075	
9	Correx Potentiostat	Correx Potentiostat 2.3		LV306160	
10	Temperature Sensor	Sensor Top Of Vessel (4 pins)		LV304469	
11	Temperature Sensor	Sensor Bottom Of Vessel (2 pins)		LV308149	
12	Air Proving Switch Assembly	Air Proving Switch Assembly (115 Pa)		LV309169	
13	Cable Assembly	Cable Assembly		LV309136	
14	Gasket And Fixings Kit	Gasket/Mounting Set		LV309608	
15	Air Inlet Pipe	Air Inlet Connection Pipe		LV309148	
16	Inspection Door Service Kit	Inspection Door Service Kit		LV305082	
17	Drain Valve	Drain Valve 1"		LV308997	
18	Flue Transition Collar	Connector Exhaust		LV192636	
19	Solar Control	Solar Heat Master - Lochinvar Ltd		LV311400	
20	Sensor Collector	Collector Sensor Single (20k/2 pins)		LV308904	
21	Temperature Sensor	Temp. Sensor Single (2 pins/short)		LV308149	
22	LPG Governor	LPG Governor		LV310180	
-	Gas Valve Cable			LV309336	

Note. Use in

conjunction with Drawings *EVD-0056* below

HWHC44-370GCE to HWHC63-370GCE Replacement Parts List

