


HERALD BOILER SPARE PARTS LIST

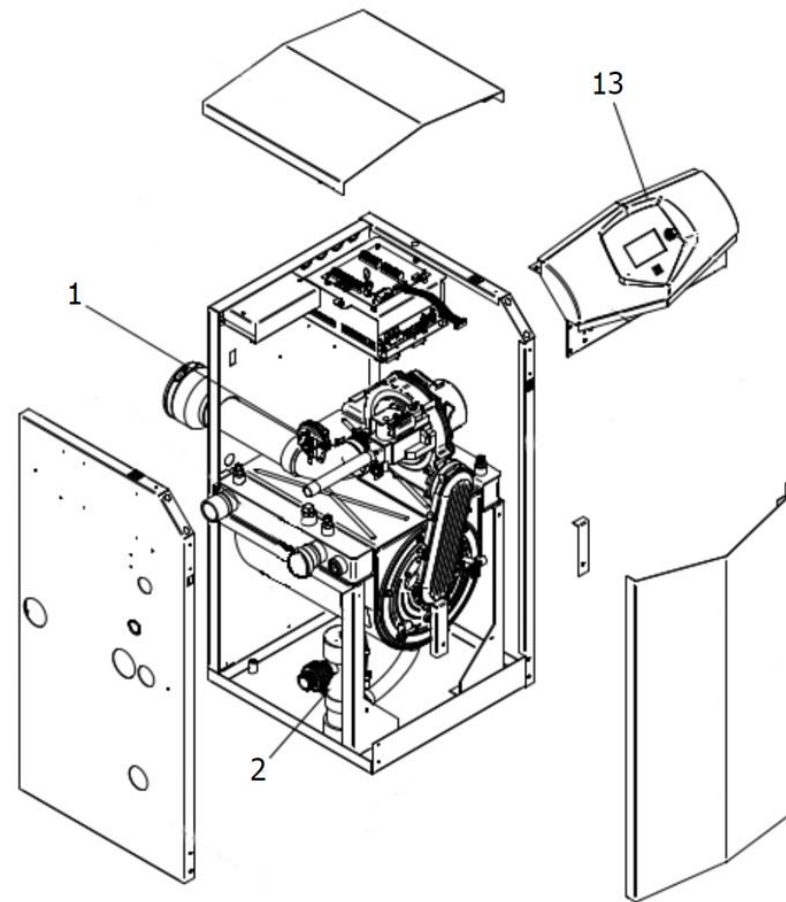


Item No	Description of item	Item Comments	HC B 46CE	HC B 61CE	HC B 86CE	HC B 116CE	HC B 146CE	HC B 176CE	HC B 206CE	HC B 236CE
1	PRESSURE SWITCH		PRS20001	PRS20002	PRS20001	PRS20002	LL100208383	LL100208382	LL100208382	LL100208382
2	CONDENSATE TRAP		MSC2971	MSC2971	MSC30032	MSC30032	MSC30032	MSC30032	MSC30032	MSC30032
3	FAN ASSEMBLY		FAN2051	FAN2052	FAN2053	FAN2054	FAN2055	FAN20001	FAN20001	FAN20001
4	BURNER DOOR INSULATION		FIB2168	FIB2168	FIB2168	FIB2168	FIB2168	FIB2146	FIB2146	FIB2146
5	COMBUSTION CHAMBER INSULATION	10mm	FIB2167	FIB2167	FIB2167	FIB2167	FIB2167	FIB2167	FIB2167	FIB2167
5	COMBUSTION CHAMBER INSULATION	16mm	LE04000213	LE04000213	LE04000213	LE04000213	LE04000213	LE04000213	LE04000213	LE04000213
6	FAN GASKET		GKT2436	GKT2456	GKT2436	GKT2436	GKT2438	GKT2049	GKT2049	GKT2049
7	GAS VALVE GASKET		GKT2443	GKT2443	GKT2443	GKT2444	-	GKT2050	GKT2050	GKT2050
8	AIR SHROUD GASKET		-	-	-	-	GKT2080	-	-	-
9	IGNITION ELECTRODE C/W GASKET		PLT3021	PLT3021	PLT3021	PLT3021	PLT3021	PLT30000	PLT30000	PLT30000
10	DETECTION ELECTRODE C/W GASKET		PLT3022	PLT3022	PLT3022	PLT3022	PLT3022	PLT3023	PLT3023	PLT3023
11	BURNER CONTROL PCB		LL100189279	LL100189279	LL100189279	LL100189279	LL100189279	LL100189279	LL100189279	LL100189279
12	LOW VOLTAGE CONNECTION BOARD		LL100265692	LL100265692	LL100265692	LL100265692	LL100265692	LL100265692	LL100265692	LL100265692
13	DISPLAY PCB		LL100278134H CB46	LL100278134H CB61	LL100278134H CB86	LL100278134HC B116	LL100278134HC B146	LL100278134HC B176	LL100278134HC B206	LL100278134HC B236
14	GAS VALVE ASSEMBLY		VAL3201	VAL3202	VAL3203	VAL3204	VAL3207	VAL3212	VAL3212	VAL3213
-	FLUE TEMPERATURE SENSOR	NOT SHOWN	TST30011	TST30011	TST30011	TST30011	TST30011	TST30011	TST30011	TST30011
16	INLET TEMP SENSOR		LL100208549	LL100208549	LL100208549	LL100208549	LL100208549	LL100208549	LL100208549	LL100208549
17	OUTLET/HIGH LIMIT TEMP SENSOR		LL100208544	LL100208544	LL100208544	LL100208544	LL100208544	LL100208544	LL100208544	LL100208544
18	AIR INTAKE GASKET		-	-	-	GKT2034	GKT2034	GKT2034	GKT2034	GKT2034
18A	GAS/AIR VENTURI	176 to 236 models	-	-	-	-	-	LL100171878	LL100171878	LL100171878
19	TRANSFORMER		LL100208230	LL100208230	LL100208230	LL100208230	LL100208230	LL100208230	LL100208230	LL100208246
20	BURNER DOOR RUBBER GASKET		GKT2455	GKT2455	GKT2455	GKT2455	GKT2455	GKT2063	GKT2063	GKT2063
21	AIR VENT VALVE		RLV30000	RLV30000	RLV30000	RLV30000	RLV30000	RLV30000	RLV30000	RLV30000
22	BURNER C/W GASKET		BNR3426	BNR3427	BNR3428	BNR3429	BNR3429	BNR3432	BNR3433	BNR3434
23	BURNER GASKET		LL100208085	LL100208085	LL100208085	LL100208085	LL100208085	GKT2062	GKT2062	GKT2062
24	BURNER DOOR TEMPERATURE SWITCH		-	-	LL100094572	LL100094572	LL100094572	LL100094572	LL100094572	LL100094572

HERALD BOILER SPARE PARTS LIST




GENERAL CONTROL ITEMS ALL MODELS


HERALD BOILER SPARE PARTS LIST

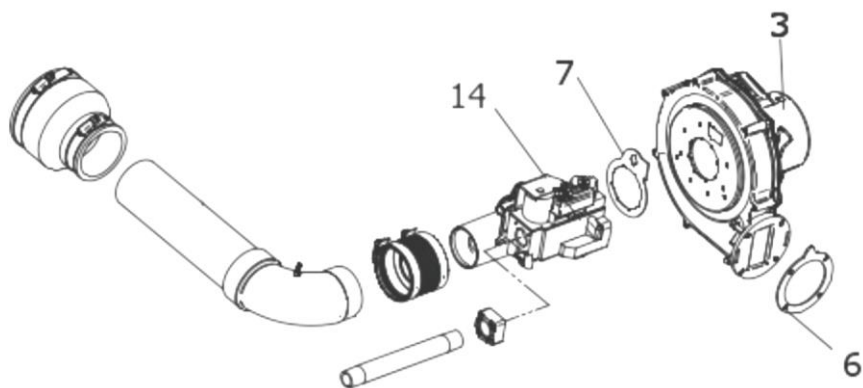


GAS TRAIN MODELS HCB 46 TO 61

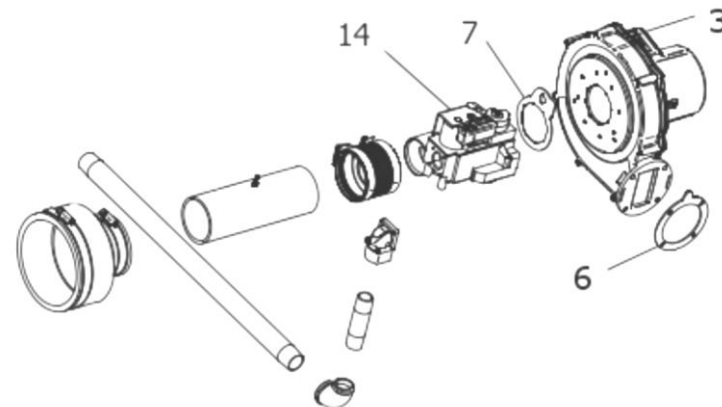

GAS TRAIN MODEL HCB 86

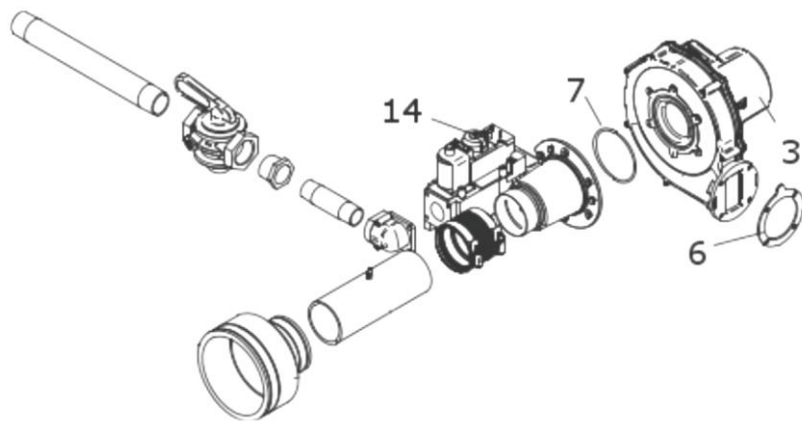


GAS TRAIN MODEL HCB 116

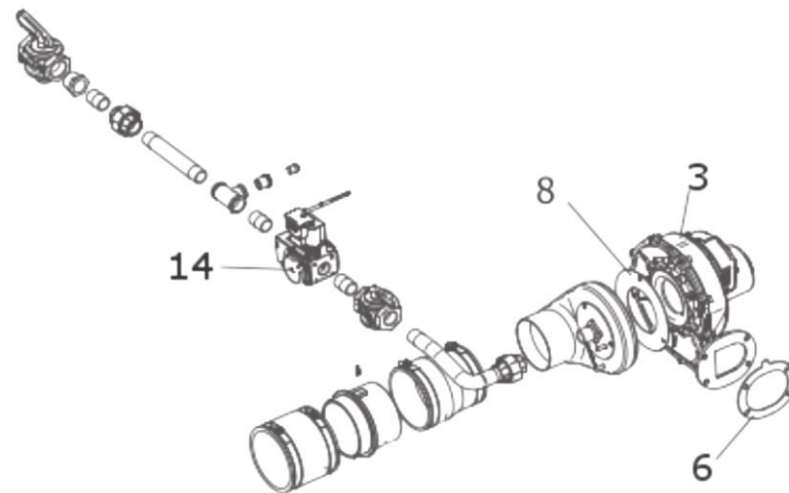


GAS TRAIN MODEL HCB 146

HERALD BOILER SPARE PARTS LIST

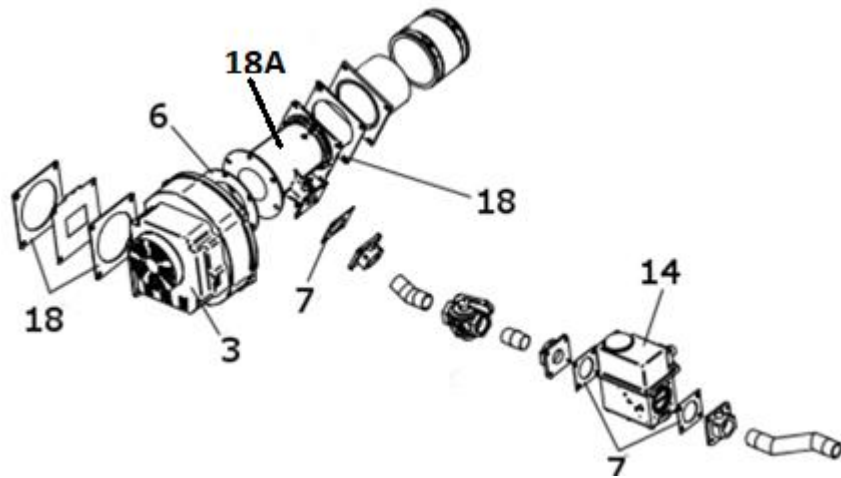


GAS TRAIN MODELS HCB 176 TO 236

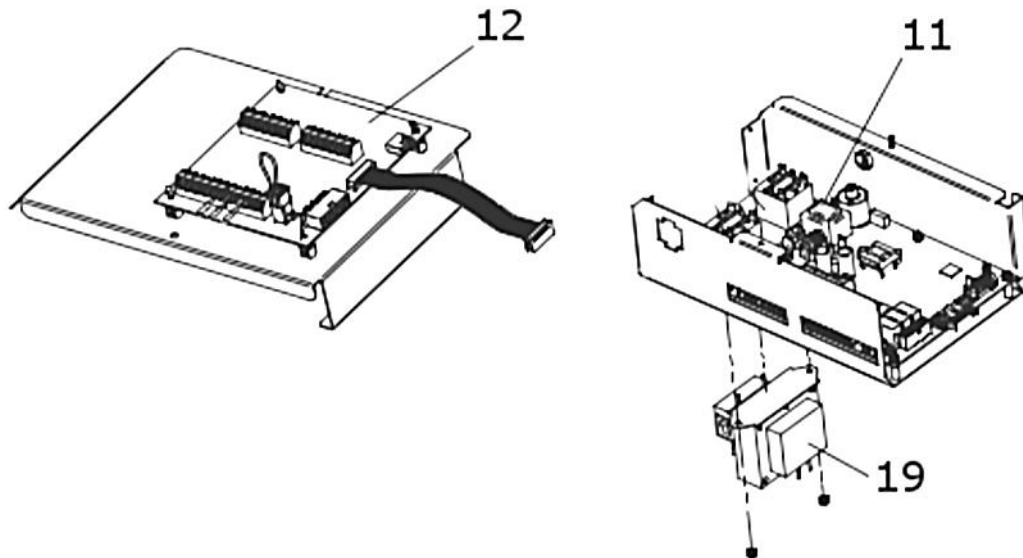

CONTROL PANEL ALL MODELS

HERALD BOILER SPARE PARTS LIST

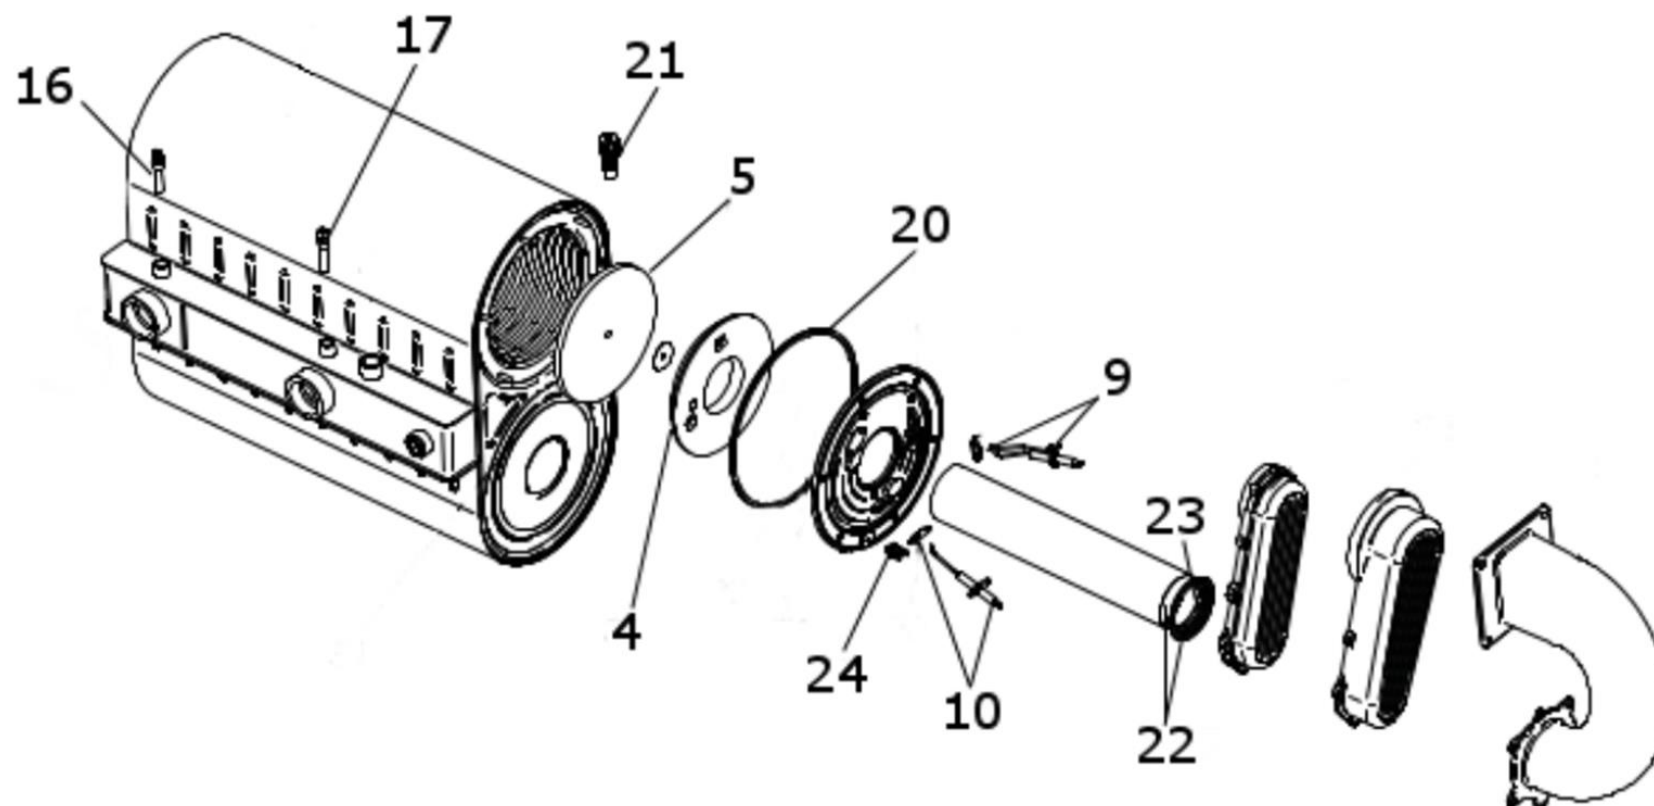

HEAT EXCHANGER ALL MODELS