

TECHNICAL PRODUCT SUBMITTAL

EcoKnight EKW46CE



TECHNICAL DATA

| | | |
|--|---------|-----------------|
| Nominal Input (net) | kW | 39.6 |
| Nominal Input (gross) | kW | 44 |
| Gas Flow Rate (natural gas) | m3/hr | 4.2 |
| Nominal Output | kW | 41.2 |
| EFFICIENCY DATA-Part L2 | | |
| Heat generator seasonal efficiency | % | 93.6 |
| Effective heat generator seasonal efficiency * | % | 96.1 |
| EFFICIENCY DATA-ErP and Energy Label | | |
| Ecodesign Energy Label rating | | A |
| Seasonal space heating energy efficiency | % | 95 |
| GENERAL DATA | | |
| NOx emission @0% O2 | mg/kWh | 33 |
| Recovery Rate @ 44°C | l/hr | 806 |
| Recovery Rate @ 50°C | l/hr | 709 |
| Recovery Rate @ 56°C | l/hr | 633 |
| Dimensions (height) | mm | 840 |
| Dimensions (width) | mm | 395 |
| Dimensions (depth) | mm | 459 |
| Water Content | litres | 4.9 |
| Weight (empty) | kg | 75 |
| Weight (full) | kg | 80 |
| Flow Connection (inches) | BSP | 1½ |
| Return Connection (inches) | BSP | 1½ |
| Gas Connection (inches) | BSP | ½ |
| Electrical Requirements | | 230V /1Ph/ 50hz |
| Power Consumption | W | 120 |
| Sound Power Level | LWA(db) | 58 |
| Maximum Flue Gas Temperature | °C | 120 |
| Max Outlet Temperature | °C | 88 |
| Maximum Working Pressure | bar | 11 |

* The effective heat generator seasonal efficiency is the heat generator seasonal efficiency plus heating efficiency credits gained by adopting additional measures from Table 31 of the non-domestic compliance guide.

1. Fully automatic ignition controls 0.5%
2. Correct sizing of unit confirmed using manufacturers technical helpline and sizing software 2%

EcoKnight water heaters must be installed and maintained in line with the Installation Commissioning and Maintenance Instructions which are available on the Literature & Downloads section of www.lochinvar.ltd.uk

Particular attention should be made to:-

- Correct sizing of associated buffer vessel
- Dimensions and clearances
- Vented and Unvented installation requirements
- maintenance


ErP and Warranty

ErP Data including Product Fiche and Energy Labels where applicable and Warranty information are also available at www.lochinvar.ltd.uk

TECHNICAL PRODUCT SUBMITTAL

EcoKnight EKW46CE

DIMENSIONS AND CONNECTIONS

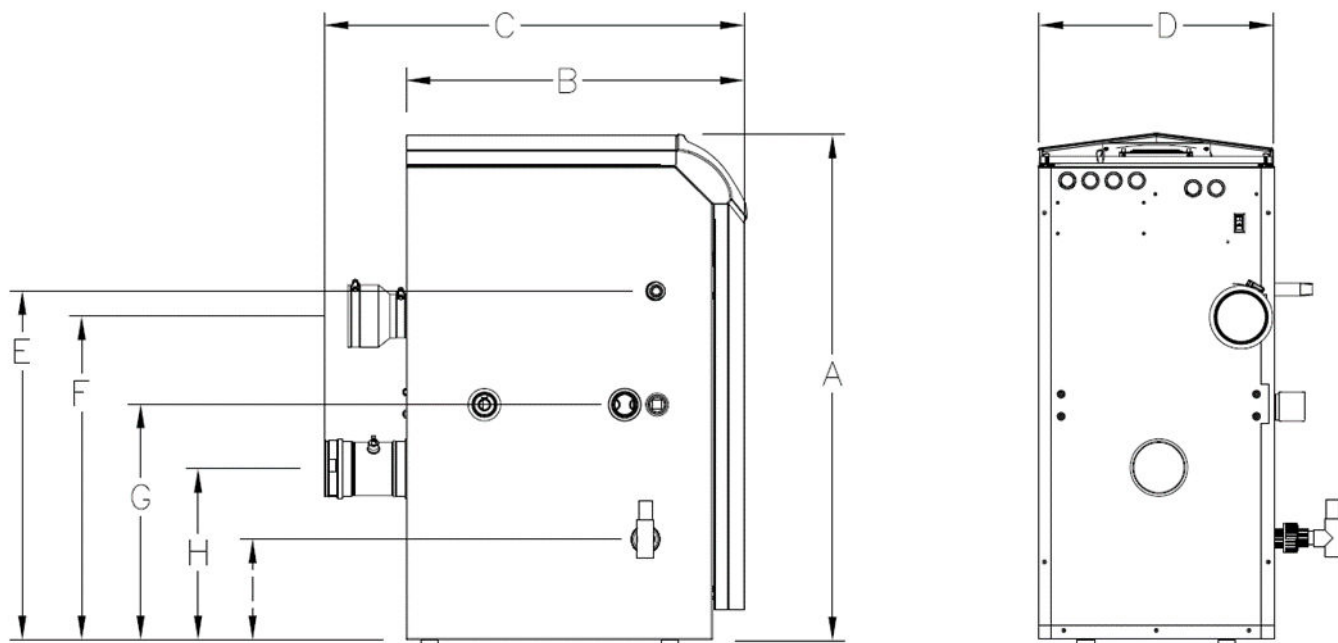

| Description | | | Model | |
|-------------|-----------------------|----|---------|---------|
| | | | EKW46CE | EKW61CE |
| A | Height | mm | 840 | 840 |
| B | Depth | mm | 459 | 567 |
| C | Depth inc Flue Outlet | mm | 599 | 707 |
| D | Width | mm | 395 | 395 |
| E | Gas Connection | mm | 582 | 582 |
| F | Air Inlet | mm | 540 | 540 |
| G | Water Connections | mm | 390 | 390 |
| H | Flue Outlet | mm | 286 | 286 |
| I | Condense Outlet | mm | 167 | 167 |

| Connection Sizes | | | Model | |
|------------------|-------------------|-----|---------|---------|
| | | | EKW46CE | EKW61CE |
| E | Gas Connection | BSP | ½" | ½" |
| F | Air Inlet | mm | 80 | 80 |
| G | Water Connections | BSP | 1¼" | 1¼" |
| H | Flue Outlet | mm | 80 | 80 |
| I | Condense Outlet | PVC | ½" | ½" |

TECHNICAL PRODUCT SUBMITTAL

EcoKnight EKW46CE

PRIMARY PIPEWORK SIZING AND MATCHED CIRCULATING PUMPS



Lochinvar will offer a matched primary pump which is sized on the flow rate and pressure drop as shown in table 1 and pipework sized according to table 2 below. The calculated pressure drop and pump selection is based on:

- maximum total flow/return pipework is no more than 14 metres
- maximum 4no 90 bends
- 3 fully ported isolating valves per water heater

If the system design is outside these parameters it is the installers/specifiers responsibility to check the pump will be suitable using the pump curves shown in table 3. Also shown is the pump curve for a larger alternative pump which may be suitable. **Please ensure the correct pump is chosen.**


TABLE 1 FLOW RATE AND PRESSURE DROP

| Data | | | |
|--------------------|---------|-----------------|-------------------|
| Water heater model | delta t | Flow rate l/sec | Pressure drop kPa |
| EKW46CE | 10 | 0.98 | 72 |
| EKW61CE | 10 | 1.59 | 66 |
| EKW86CE | 10 | 2.27 | 69 |
| EKW116CE | 10 | 3.18 | 93 |
| EKW146CE | 10 | 4.01 | 78 |
| EKW176CE | 10 | 4.01 | 78 |
| EKW206CE | 10 | 4.77 | 96 |
| EKW236CE | 10 | 5.07 | 93 |

TABLE 2 PIPEWORK SIZING

| MODEL | PIPEWORK A BLUE SIZE (mm) | PIPEWORK B RED SIZE (mm) | | | |
|---------|---------------------------|--------------------------|----|----|--|
| | NUMBER OF ECOKNIGHT™ | | | | |
| | 1 | 2 | 3 | 4 | |
| EKW46CE | 35 | 42 | 54 | 67 | |
| EKW61CE | 35 | 42 | 54 | 67 | |
| EKW86CE | 54 | 54 | 67 | 76 | |


DRAWING 1 SINGLE EKW AND VESSEL

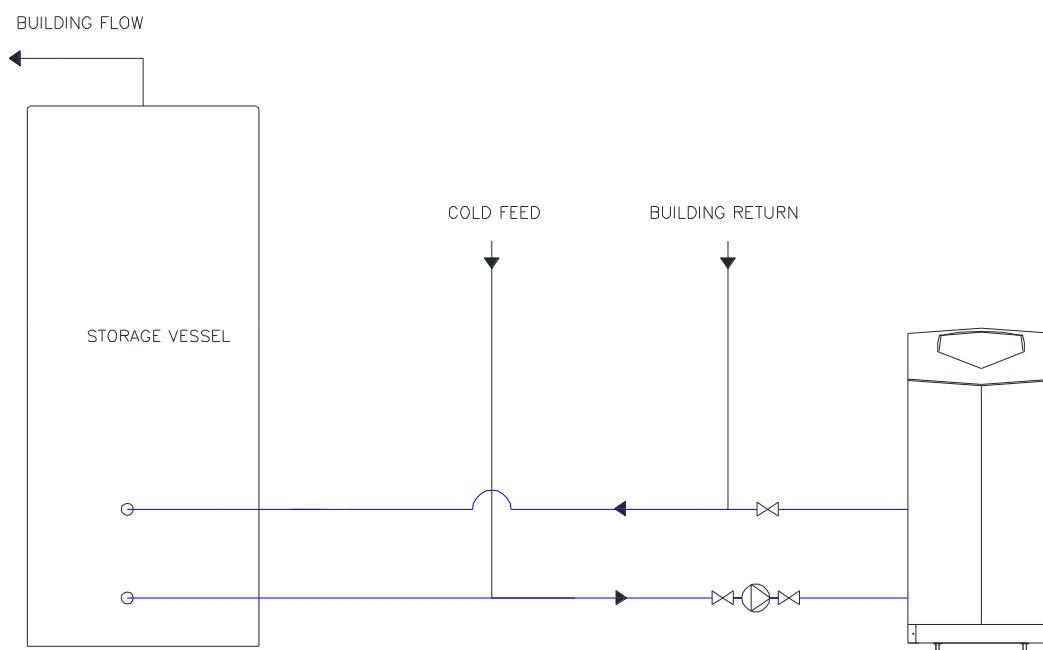

TECHNICAL PRODUCT SUBMITTAL

EcoKnight EKW46CE


DRAWING 2 MULTIPLE EKW AND VESSEL(S)

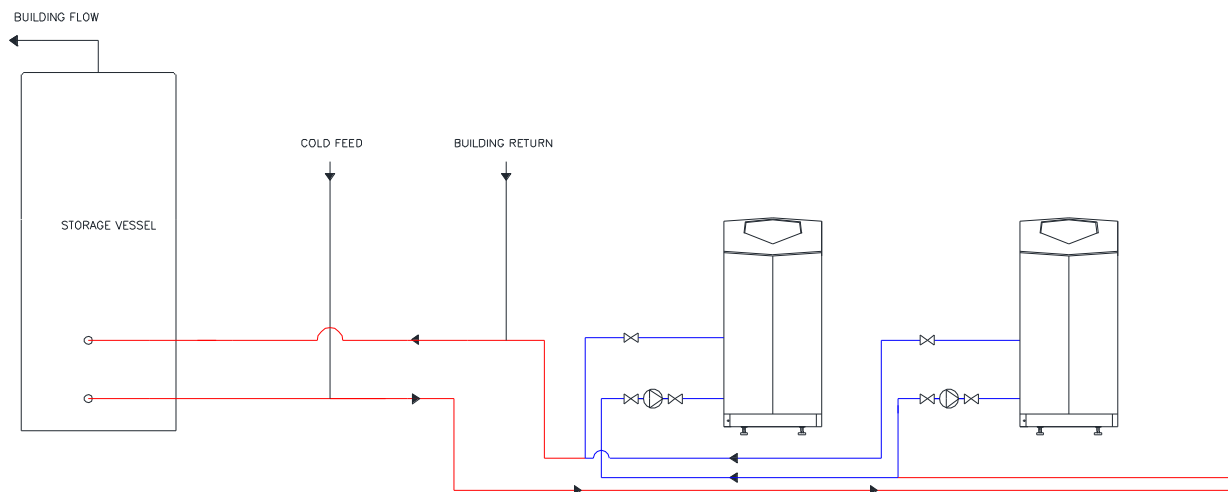

In general the standard pump will be suitable for a single unit and vessel, multiple water heaters and/or multiple vessels will require the alternative pump.

TABLE 3 PUMP CURVES

LM900332A STANDARD PUMP, CURVE

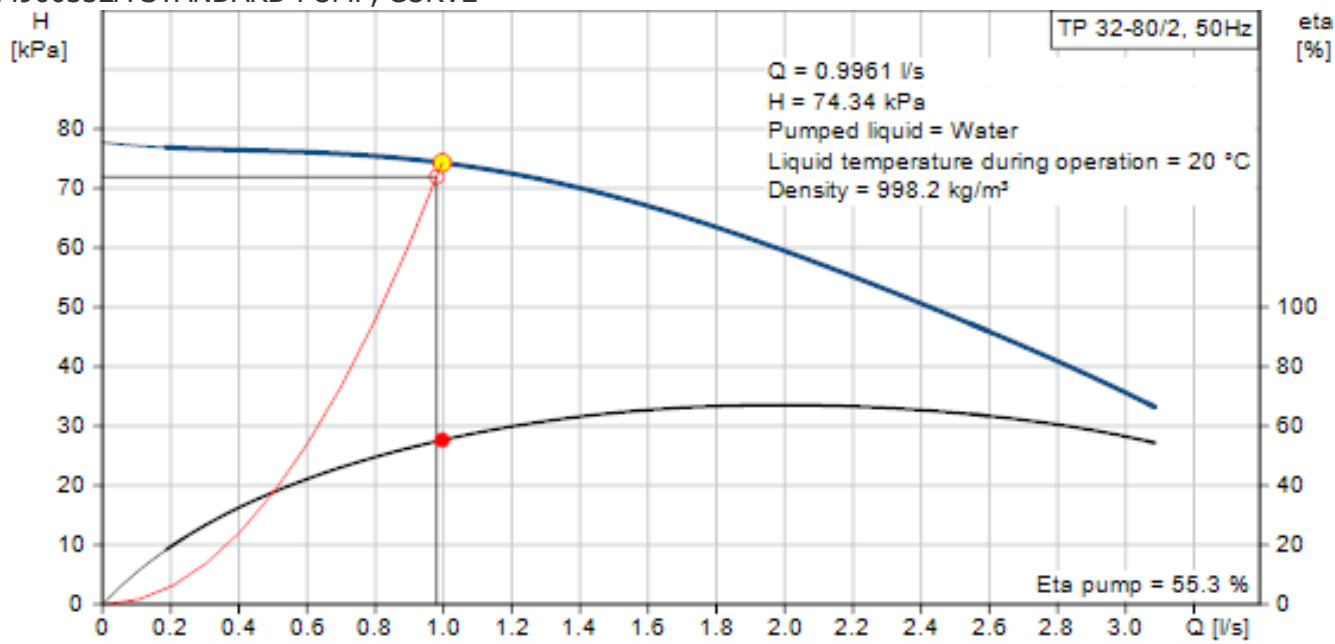


TECHNICAL PRODUCT SUBMITTAL

EcoKnight EKW46CE



LM900384A ALTERNATIVE HIGH HEAD PUMP, CURVE

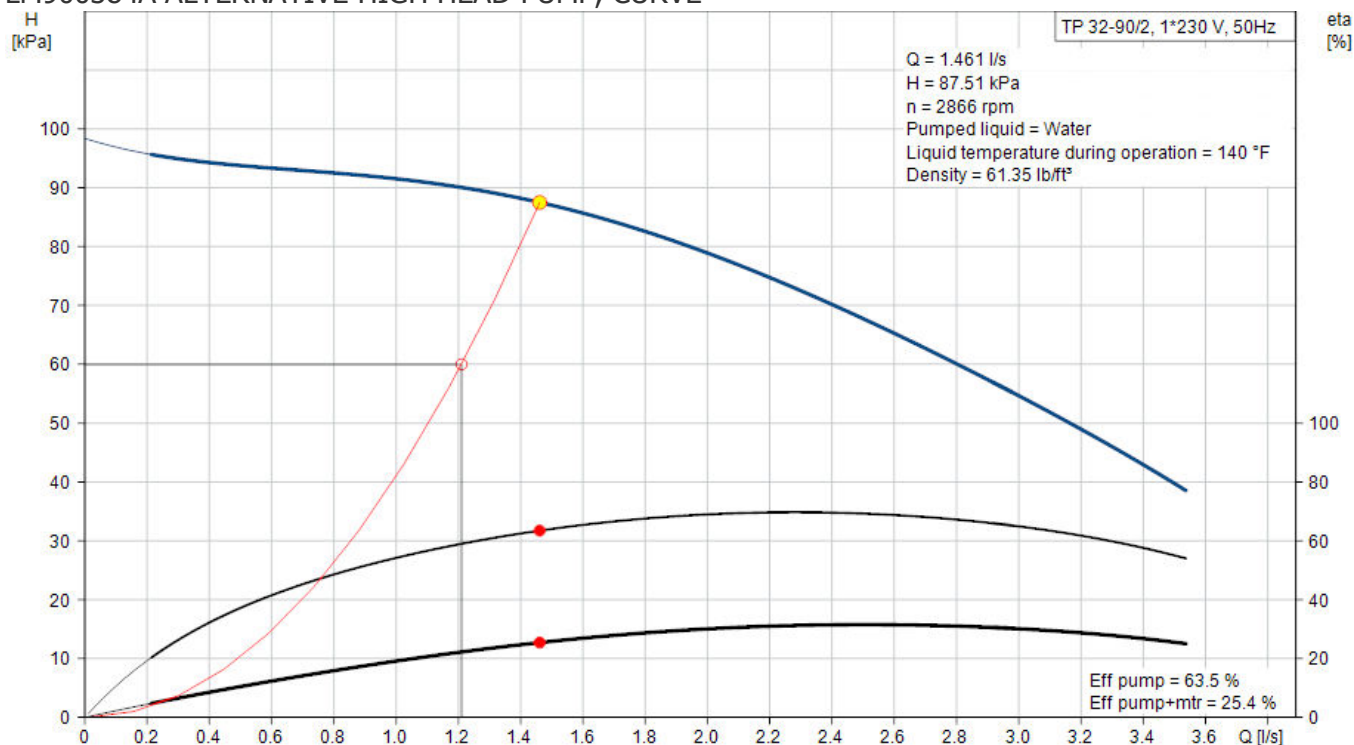


WIRING AND CONTROL

EcoKnight water heaters come complete with the following standard controls:

- Primary pump control

Although EcoKnight will turn the Primary pump on/off this must be via an external relay. The pump must not be wired directly from the water heater.

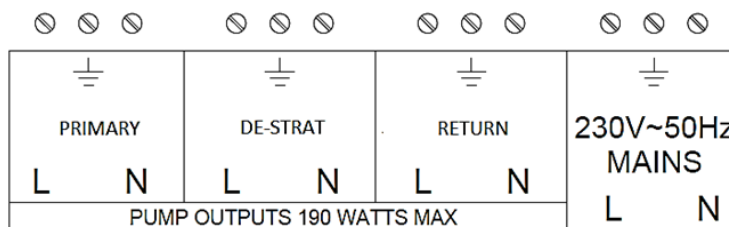

| CONNECTION | OUTPUT | NOTES |
|------------|---|--|
| PRIMARY | 230VAC – Output is when there is a call for DHW MAX 190 WATTS | 230 VAC Live, Neutral and Earth connections for a primary circulation pump starter. NOTE: On all EcoKnight™ water heaters, the primary pump exceeds the maximum power output and therefore a suitable starter/overload relay will be required. |
| DE-STRAT | NO OUTPUT | CONNECTION NOT USED |
| RETURN | 230VAC – Constant output when unit powered MAX 190 WATTS | 230 VAC Live, Neutral and Earth connections for a secondary circulation pump. If the pump rating exceeds the maximum 190 watts available over the three terminals, the Live and Neutral connections should then be used to switch a suitable starter/overload relay. |
| MAINS | | Connections for a 230V ~ 1 ph 50Hz power supply. NOTE: The power supply cable should be secured using the anchor supplied. |


TECHNICAL PRODUCT SUBMITTAL

EcoKnight EKW46CE

- Vessel temperature sensor and water heater activation

In order for the water heater to work correctly the vessel sensor supplied with every water heater must be installed within the storage vessel at point 7 as shown in drawing 3 below. When installing multiple water heaters only one vessel sensor is required, wired back to the cascade leader with all other water heaters wired back to the leader. When a hot water demand is detected the cascade lead will decide how many water heaters to activate to maintain set point, the cascade leader will also rotate which water heater is activated first to share running hours between the whole cascade. A second water heater can be programmed to take over from the cascade leader should the cascade leader suffer from an electrical failure, when the cascade leader is repaired the alternate lead will relinquish control back to the cascade leader.

DRAWING 3

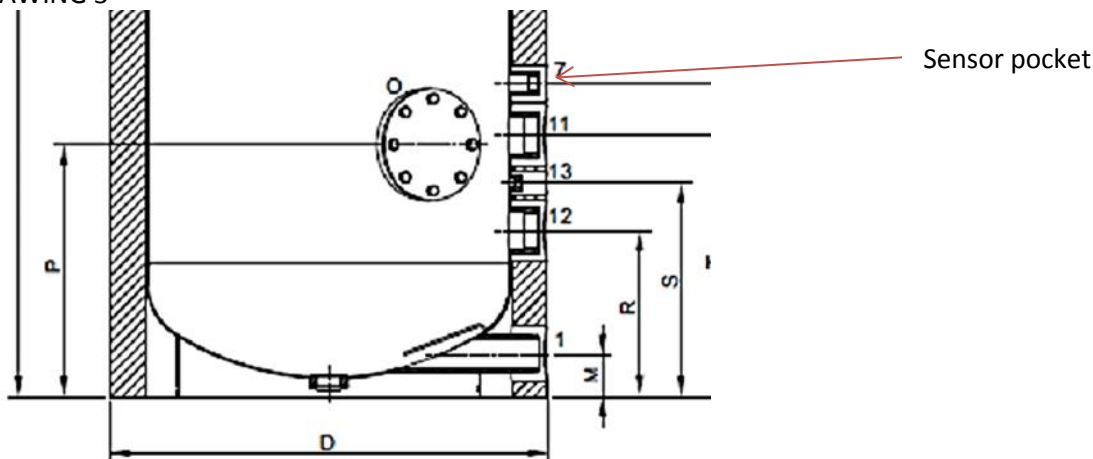

- Cascade control
- Remote on/off
- Fault signal

WATER QUALITY REQUIREMENTS

Water supply quality may adversely affect the efficiency performance and longevity of Water Heaters and Hot Water systems. Hard water may cause the formation of limescale that will reduce operating efficiency and may cause early product failure. Please note the following: -

- Water Hardness – should not exceed 205ppm CaCO₃ and Total Dissolved Solids (TDS) of untreated water should not exceed 350ppm.

If these values are exceeded a water treatment specialist should be consulted. Water Softeners and Water Conditioners may be considered, but whichever method is selected, it should be suitable for installation with Direct Gas-fired Water Heaters. A maintenance regime will also be required for such systems

- High hot water temperature and high demand for hot water is likely to cause quicker limescale formation
The formation of limescale or other solids can cause a blockage within the heat exchanger, which in turn may cause premature failure. Such instances are not regarded as defects in manufacture and will not be covered under the product warranty